CONCORD NEO




DEUTSCH	03
ENGLISH	25
FRANÇAIS	47
ESPAÑOL	69
ITALIANO	91
PORTUGUÊS	113
NEDERLANDS	135
NORSK	157
DANSK	179
SUOMI	201





Norm DIN EN 1888:2012 standard DIN EN 1888:2012 norme DIN EN 1888:2012 norma DIN EN 1888:2012 szabvány DIN EN 1888:2012




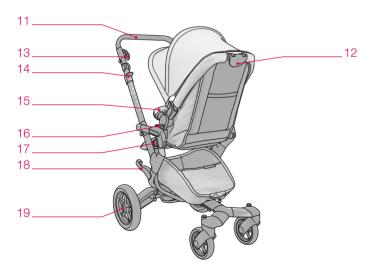

_ ENGLISH

OVERVIEW	26
THANK YOU!	28
PLEASE NOTE	28
ATTACHING AND REMOVING THE BACK WHEELS	30
USING THE PARKING BRAKE	31
LOCKING THE FRONT WHEELS	31
UNFOLDING AND FOLDING	32
ATTACHING AND REMOVING THE SEAT FRAME (PROFIX	
SYSTEM)	33
SETTING THE SEAT ANGLE	35
USING THE SAFETY BAR	36
USING THE SUN SHADE	37
ADJUSTING THE HANDLEBAR	38
ADJUSTING THE FOOTREST	39
USING THE HARNESSING SYSTEM	40
USING THE WIND PROTECTOR	42
USING THE RAIN COVER	43
PUTTING ON, REMOVING AND LAUNDERING THE COVER	44
CLEANING AND MAINTENANCE	44
CONCORD ORIGINAL SPARE PARTS/ACCESSORIES	45
GUARANTEE	46

OVERVIEW

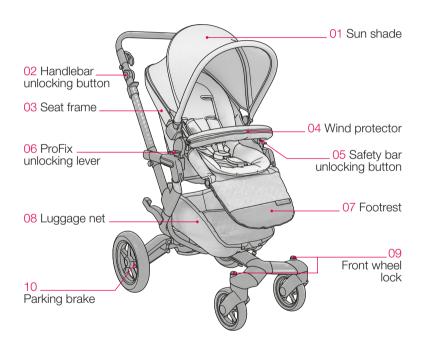



THANK YOU!

You have made a good choice with this Concord quality product. You will be impressed by the versatility and safety of this product. We hope you will have lots of fun with your new CONCORD NEO.

_ PLEASE NOTE

IMPORTANT!

- Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.
- Keep these instructions for future reference.


WARNING!

- This vehicle is intended for children from 6 months and up to 15 kg.
- This seat unit is not suitable for children under 6 months.
- Suitable for children under 6 months old only with accessories approved by CONCORD.
- This vehicle has been designed to be used by one child. Do not use it with more children at the same time.
- The CONCORD NEO is not a child car seat! Only transport your children in tested, approved child seats.
- Some Concord accessory products are fitted with adaptors suitable for the CONCORD NEO, making it easy to attach them to the CONCORD NEO. Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- Never leave your child unattended.
- Do not let your child play with this product.
- Always use the restraint system.
- Use a harness as soon as your child can sit unaided.
- Always use the crotch strap in combination with the waist belt.

- The parking device shall be engaged when placing and removing the children.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.
- You should take the child out of the CONCORD NEO whenever you have to manoeuvre stairs or steep slopes.
- This product is not suitable for running or skating.
- Never allow a child to stand on the connecting rods between the wheels of the CONCORD NEO. This can damage the CONCORD NEO and impair its safety.
- Ensure that all the locking devices are engaged before use.
- Check all the parts of the CONCORD NEO, and the accessories used, at regular intervals.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Never use accessories that have not been approved by CONCORD.
- Only replacement parts supplied or recommended by CONCORD shall be used.
- The guarantee does not apply if the CONCORD NEO is damaged through excess strain, incorrect usage or the use of other spare parts / accessories.
- Sunlight may cause a slight discoloration of parts of the CONCORD NEO.
- Please avoid exposing the CONCORD NEO to extreme temperatures.
- Throw away all plastic packaging immediately. It can put your child's life at risk.
- The maximum amount carried in the basket must never exceed the weight indicated on the basket (2 kg).

ATTACHING AND REMOVING THE BACK WHEELS

To attach the back wheel, press and hold the pushbutton as you push the wheel onto the CONCORD NEO axle, and let it click audibly into place.

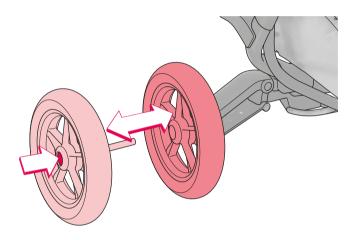

To remove a back wheel, press and hold the pushbutton (19) and pull the wheel off the axle.

WARNING!

The occurrence of cutting, pressure and crushing points during these procedures are inevitable.

USING THE PARKING BRAKE

 
Push the operating lever (13) on the right of the handlebar (11) down to activate the parking brake (10) of the CONCORD NEO.

WARNING!


If the parking brake of the pram is activated, make sure that the parking brake is correctly engaged. It is also necessary to slightly move the pram in order to completely activate the parking brake.

Press the release button and move the operating lever (13) on the right of the handle bar (11) upward to release the parking brake.





LOCKING THE FRONT WHEELS

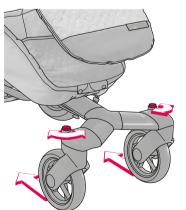


Position the front wheels of the CONCORD NEO to face backwards, and turn the locker buttons (09) from the outside inwards to lock the front wheels.

Turn the locker buttons from the inside outwards to release the wheels.


UNFOLDING AND FOLDING

WARNING! The occurrence of cutting, pressure and crushing points during these procedures are inevitable.


To set up the CONCORD NEO, first release the transport lock (18) by pressing it downwards or backwards. Then pull the handlebar (11) upwards until you hear it engage with a clear click.

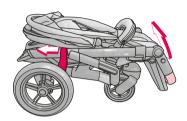

 To fold down the CONCORD NEO, first adjust the seat angle on the seat frame (03) to position P (see ADJUSTING THE SEAT ANGLE).




The unlocking levers are located on the left and right of the handle. To unlock, press and hold the safety button on the inside of the left unlocking lever (14) and pull both unlocking levers upwards. Now push the handlebar forwards/down until the transport locking device engages.

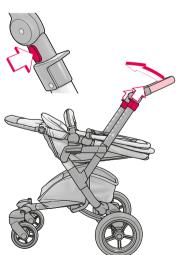

_ ATTACHING AND REMOVING THE SEAT FRAME (PROFIX SYSTEM)

The CONCORD NEO is equipped with ProFix adapters (16). These adapters are used to attach the CONCORD NEO seat frame to the chassis. You can secure the seat frame to the chassis so that it is either front or rear facing. To do this, insert the seat frame from above into the receivers on the chassis and let it click audibly into place.

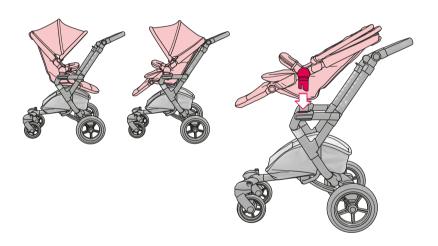

WARNING

- Never seat your child in the seat frame until after you have secured the frame to the chassis.
- Before using the CONCORD NEO, ensure that all fixing mechanisms and fastenings are properly locked in position and closed.
- Never remove the seat frame from the chassis while a child is sitting in it.
- This vehicle has been designed for a single child and must not be used for several children simultaneously.

To remove the seat frame from the chassis, pull simultaneously on the right and left ProFix unlocking levers (06) on the seat frame and pull the frame upwards and away from the chassis.



Tip: Various elements can be attached to the CONCORD NEO by means of the ProFix adapter (CONCORD AIR, CONCORD SCOUT, CONCORD SLEEPER). Some Concord accessories, available from specialist retailers, are equipped with adapters suitable for the CONCORD NEO, making it easy to attach them to the CONCORD NEO. Check before use that the Concord accessory has engaged properly in the CONCORD NEO. Please also refer to the instructions for use enclosed with the relevant Concord accessory.


SETTING THE SEAT ANGLE

You can set the seat frame's angle of inclination to several positions. To do this, pull the adjustment handle (12) on the top edge of the seat frame and adjust the seat angle until it engages in the required position.




WARNING

 An additional position (P) allows the CONCORD NEO to be folded down extra compactly, but it must be used solely for this purpose and never for transporting a child.

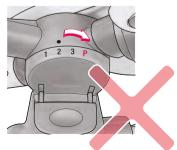

USING THE SAFETY BAR

The safety bar (15) on the CONCORD NEO engages in the receivers provided for this purpose in the seat frame. You can open the safety bar on both sides or just on one. To do this, press the relevant unlocking buttons (05) on the left and right of the seat frame.

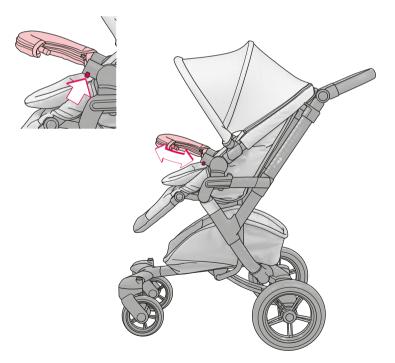


USING THE SUN SHADE

To secure the CONCORD NEO sun shade (01) onto the seat frame, push it from above onto the relevant plastic receivers on the seat frame. Then join the zip on the inside of the sun shade to the seat cover.

To remove the sun shade, undo the zip and pull the sun shade upwards and away from the seat frame.


WARNING!

Do not place loads/objects on the sun canopy.

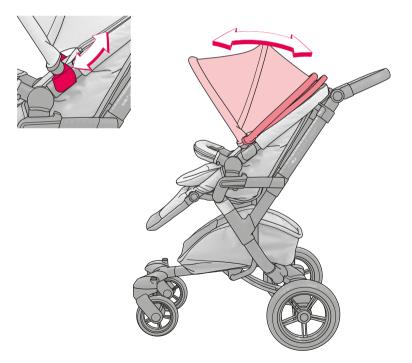

ADJUSTING THE HANDLEBAR

The handlebar can be adjusted to seven different positions. To do this, release the positioning mechanism by pressing both the unlocking buttons (02) on the left and right of the handlebar and move the bar until it engages in the next position.

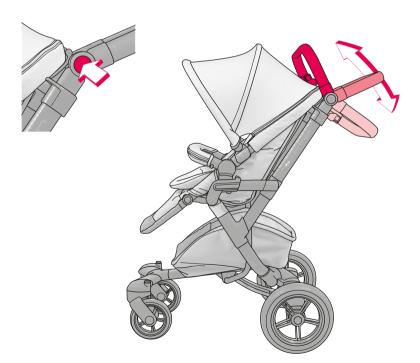


_ ADJUSTING THE FOOTREST


You can adjust the footrest (07) to five different positions. To do this, simultaneously press the left and right unlocking buttons (17). Then adjust the footrest until it engages in the required position.

WARNING!

Never permit your child to stand up on the footrest.

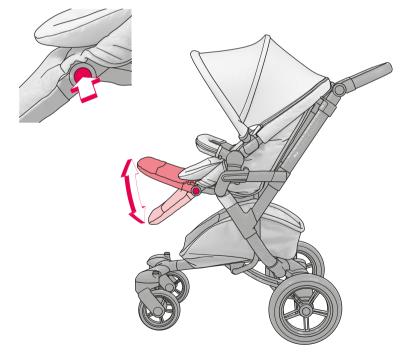


USING THE HARNESSING SYSTEM

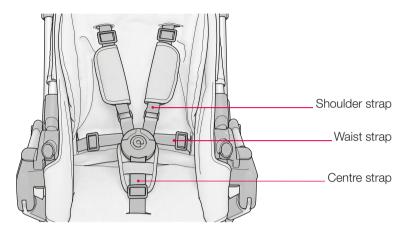

Feed the centre strap with the buckle between the child's legs. Then insert the buckle adaptors on the shoulder and waist straps from above into the top of the buckle. They should click audibly into position.




To open the harness system, press the button in the middle of the buckle until the buckle adaptors are released..

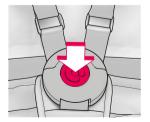


Take care that your child is always strapped in, with the buckle fastened, whenever you go out with the pushchair.

Adjust the straps so that they are taut and lie close against the child. To adjust the strap length, slide the strap clasps up or down. Check that the straps are not twisted.

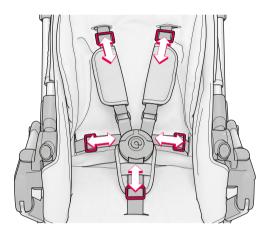

The childproof lock is on the back of the buckle. This can be activated and deactivated by turning. Activating the childproof lock locks the buckle opening mechanism.

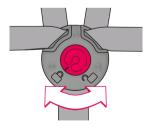

WARNING!

Always use the shoulder and waist straps together with the centre strap.

USING THE WIND PROTECTOR

The CONCORD NEO is equipped with an integrated wind protector (04). To use it, undo the zip on the safety bar and stretch the wind protector across the footrest.



USING THE RAIN COVER

To use the rain cover, pull it from the top to the bottom across the seat frame.

Allow the rain cover to dry completely before storing it in the pocket again!



_ PUTTING ON, REMOVING AND LAUNDERING THE COVER

The different parts of the cover of the CONCORD NEO are joined to each other by means of press-studs, Velcro and zip fasteners, and are attached to the rods. If you wish to remove the cover, first loosen all these fastenings.

Make sure all the fasteners and connections are done up safety when you put the cover on.

You can wipe all parts of the cover as well as the rods and the plastic parts of the CONCORD NEO with a damp cloth.

_ CLEANING AND MAINTENANCE

To prevent corrosion, always keep the metal parts of the CONCORD NEO clean and dry. Use silicone spray to regularly lubricate the moving parts. Do not use oil or grease.

Only clean parts made from synthetic materials using lukewarm water and a mild cleaning agent. Coarse contamination can be brushed off when dry.

CONCORD ORIGINAL SPARE PARTS/ACCESSORIES

Information on Concord original spare parts/accessories is available at your retailer's or directly from Concord.

Concord GmbH Industriestraße 25 95346 Stadtsteinach Germany

Phone +49 (0)9225.9550-0 Fax +49 (0)9225.9550-55 info@concord.de

www.concord.de

_ GUARANTEE

The guarantee begins on the day of purchase. The guarantee period corresponds to the statutory warranty period in the end-user's country concerned. At the manufacturer's discretion, the guarantee shall cover rectification, replacement or a price reduction.

The guarantee is valid for the original purchaser only. In the event of any defect, claims can not be considered unless the specialist dealer is notified of the fault as soon as it occurs for the first time. If the specialist dealer is unable to remedy the problem himself, he must return the product to the manufacturers together with details of the complaint, official proof of purchase and the purchase date. The manufacturers assume no liability for faulty goods that they did not supply.

The guarantee does not apply where:

- the product has been modified;
- the product is not brought back to the specialist dealer complete with proof of purchase within 14 days of the defect occurring;
- the defect was caused by improper usage or maintenance or due to anything else deemed to be the fault of the user, in particular failure to comply with the instructions for use;
- repairs have been carried out on the product by third parties;
- the defect was caused as the result of an accident.
- the serial number has been damaged or removed

The guarantee makes no provision for any alteration or deterioration to the product that is incurred through normal usage (wear and tear). The period of guarantee shall not be extended by any remedial measures carried out by the manufacturers in the event of a claim.

- _ DEUTSCH
- _ ENGLISH
- _ FRANÇAIS
- _ ESPAÑOL
- _ ITALIANO
- _ PORTUGUÊS
- _ NEDERLANDS
- _ NORSK
- DANSK
- _ SUOMI

Einbau- und Bedienungsanleitung
Instructions for attachment and use
Directives d'installation et mode d'emploi
Instrucciones de montaje y de uso
Istruzioni per l'uso e il montaggio
Manual de montagem e de utilização
Inbouw- en bedieningshandleiding
Bruksanvisning og monteringsveiledning
Monterings- og betjeningsvejledning
Kiinnitys- ja käyttöohjeet

Concord GmbH Industriestraße 25 95346 Stadtsteinach Germany

Phone +49 (0)9225.9550-0 Fax +49 (0)9225.9550-55 info@concord.de

