 


CONCORD CAMINO





DEUTSCH	01
ENGLISH	25
FRANÇAIS	49
ESPAÑOL	71
ITALIANO	93
PORTUGUÊS	115
NEDERLANDS	137
NORSK	159
DANSK	181
SUOMI	203

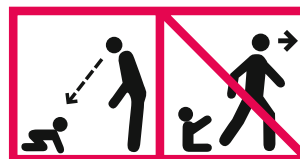

  Norm DIN EN 1888:2012
standard DIN EN 1888:2012
norme DIN EN 1888:2012
norma DIN EN 1888:2012
szabvány DIN EN 1888:2012



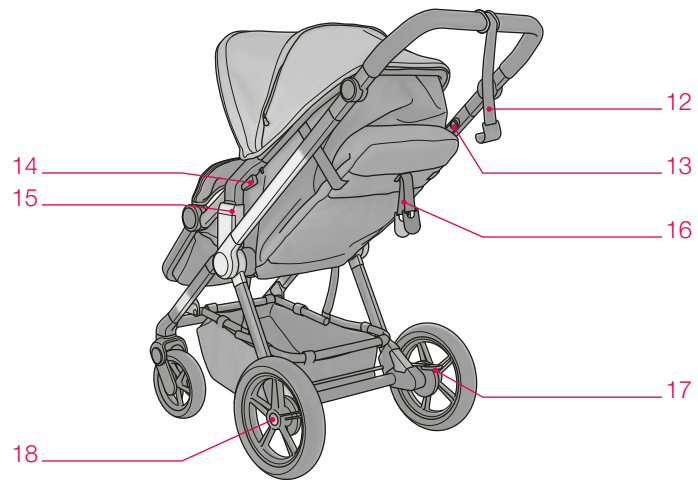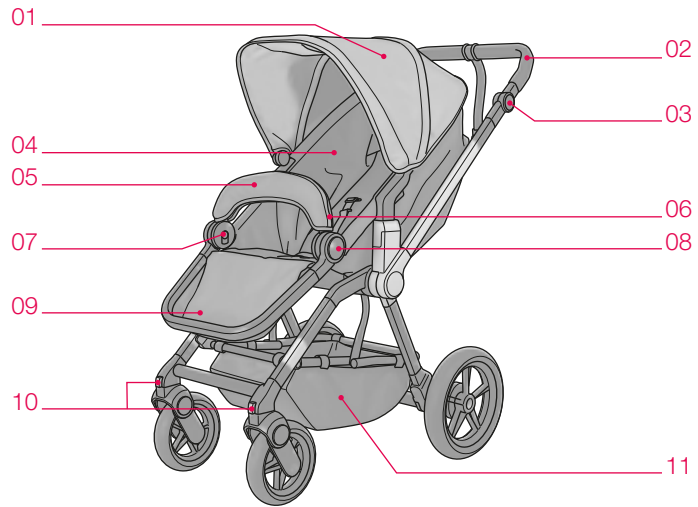

_ ENGLISH



OVERVIEW	26
WARNINGS	28
ATTACHING AND REMOVING THE REAR WHEELS	30
UNFOLDING AND FOLDING UP THE STROLLER	30
USING THE SAFETY BRAKE	33
LOCKING THE FRONT WHEELS	33
FITTING AND REMOVING THE SEAT UNIT	34
USING THE HARNESS SYSTEM	36
ADJUSTING THE HANDLEBAR	38
ADJUSTING THE FOOTREST	38
ADJUSTING THE SEAT ANGLE	39
USING THE SAFETY BAR	39
USING THE SUNVISOR	40
USING THE WIND SHIELD	41
USING THE SUNSAIL	41
USING THE RAIN COVER	42
FITTING, REMOVING AND CLEANING THE COVER	42
CLEANING AND MAINTENANCE	46
GUARANTEE	48

_ THANK YOU!

Thank you for purchasing a quality product from CONCORD. You will be impressed by the versatility and safety of this product.

We hope that you will enjoy using your new CONCORD CAMINO.

  _ OVERVIEW

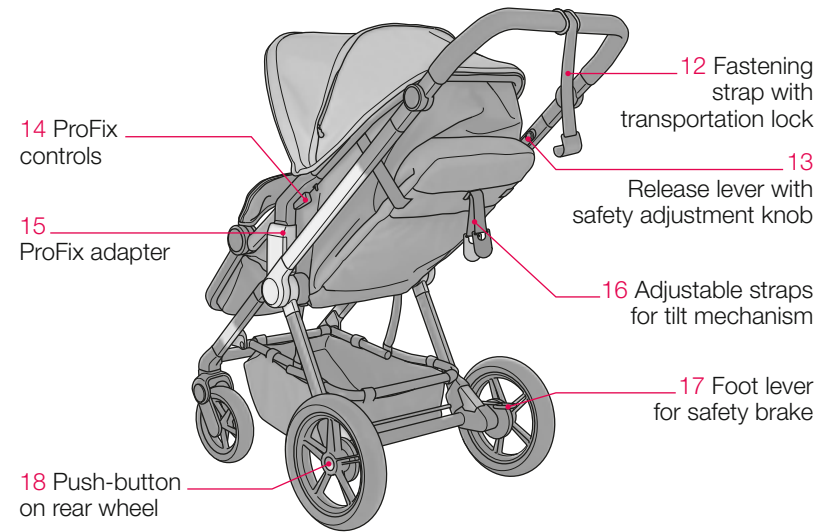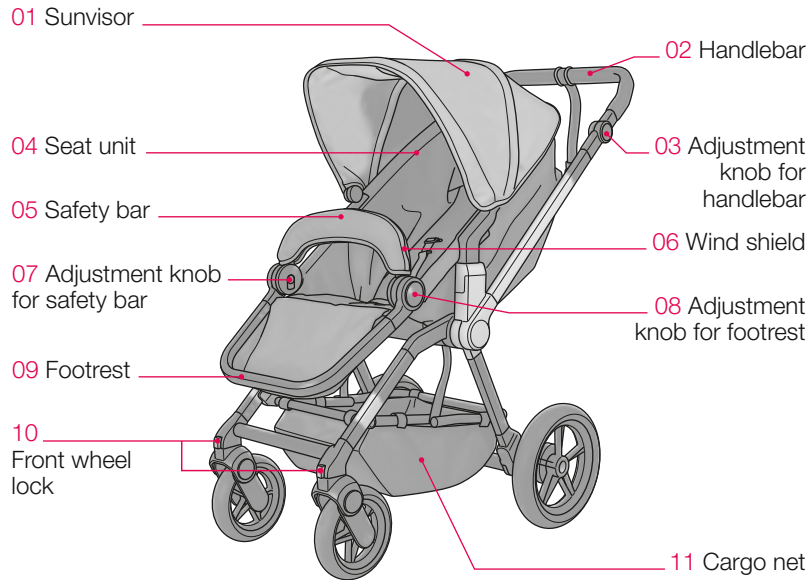

_ WARNINGS

IMPORTANT!

- Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions.
- Keep these instructions for future reference.

 
WARNING!

- This vehicle is intended for children from birth and up to 15 kg.
- From birth until 6 months old babies the most reclined position is recommended.
- This vehicle has been designed to be used by one child. Do not use it with more children at the same time.
- The CONCORD CAMINO is not a child car seat! Only transport your children in tested, approved child seats.
- Some Concord accessory products are fitted with adaptors suitable for the CONCORD CAMINO, making it easy to attach them to the CONCORD CAMINO. Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use.
- Never leave your child unattended.
- Do not let your child play with this product.
- Always use the restraint system.
- Use a harness as soon as your child can sit unaided.
- Always use the crotch strap in combination with the waist belt.
- The parking device shall be engaged when placing and removing the children.
- Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the vehicle.

- You should take the child out of the CONCORD CAMINO whenever you have to manoeuvre stairs or steep slopes.
- This product is not suitable for running or skating.
- Never allow a child to stand on the connecting rods between the wheels of the CONCORD CAMINO. This can damage the CONCORD CAMINO and impair its safety.
- Ensure that all the locking devices are engaged before use.
- Check all the parts of the CONCORD CAMINO, and the accessories used, at regular intervals.
- To avoid injury ensure that your child is kept away when unfolding and folding this product.
- Never use accessories that have not been approved by CONCORD.
- Only replacement parts supplied or recommended by CONCORD shall be used.
- The guarantee does not apply if the CONCORD CAMINO is damaged through excess strain, incorrect usage or the use of other spare parts / accessories.
- Sunlight may cause a slight discoloration of parts of the CONCORD CAMINO.
- Please avoid exposing the CONCORD CAMINO to extreme temperatures.
- Throw away all plastic packaging immediately. It can put your child's life at risk.
- The maximum amount carried in the basket (11) for objects (4 kg) and the bag on the backrest (1 kg) must never exceed the weight specified there.

For more information about original CONCORD accessories, contact your specialist retailer or CONCORD directly.

_ ATTACHING AND REMOVING THE REAR WHEELS

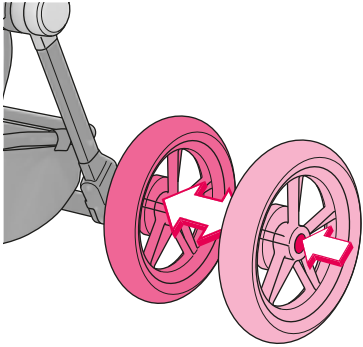

To attach the rear wheel, press and hold the push-button (18) and insert it into the socket on the CONCORD CAMINO, pushing it until you hear it click into place.

To remove the rear wheel, press and hold the push-button (18) and pull the wheel out of the socket on the stroller.

 
_ UNFOLDING AND FOLDING UP THE STROLLER

WARNING!

- Keep the child away from the moving parts when these are being operated by a responsible adult.
- The occurrence of cutting, pressure and crushing points during these procedures are inevitable.


To unfold the CONCORD CAMINO, lie the stroller on a flat and clean surface with the handlebar (02) pointing upwards and release the transportation lock (12).

Use the handlebar (02) to pull the CONCORD CAMINO upwards, so that it unfolds itself. Keep pulling upwards until the stroller has unfolded completely and you hear it lock into place.

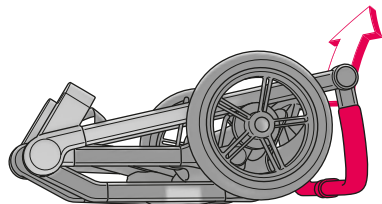


Always make sure you check that the closures have locked properly into place.

 Now place the seat unit (04) (see FITTING AND REMOVING THE SEAT UNIT) or a CONCORD-approved accessory into the ProFix sockets (15).

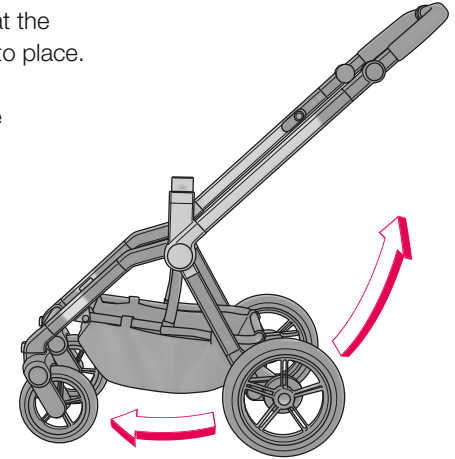

Before folding up the CONCORD CAMINO, lock the safety brake into place (see USING THE SAFETY BRAKE) and then remove all CONCORD accessories (CONCORD AIR, CONCORD SLEEPER, CONCORD SCOUT or CONCORD SNUG).

 
To make the stroller easier to handle and to ensure it folds up smaller, you can remove the seat unit (04) before folding it up (see FITTING AND REMOVING THE SEAT UNIT).

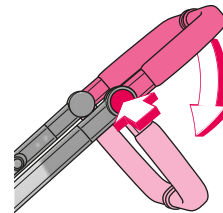

Press and hold the adjustment knobs (03) and fold the handlebar (02) down as far as it will go (see ADJUSTING THE HANDLEBAR).



Release levers (13) are located to the left and right of the handlebar (02).

 To release, press and hold the safety push-buttons on the inside of the release levers (13) and pull both of the release levers upwards.

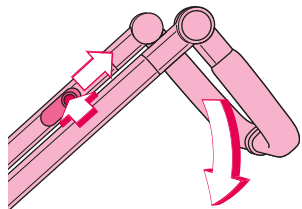


Fold the handlebar (02) downwards.

  Now use the strap on the folding mechanism to pull the CONCORD CAMINO upwards until it is completely folded together.

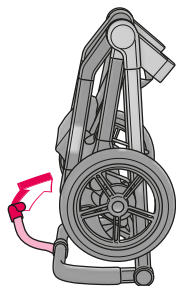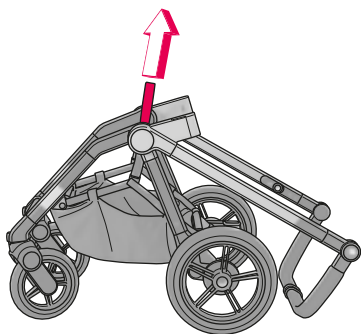

 
Now use the fastening strap and its transportation lock (12) to secure the CONCORD CAMINO for safe carriage.

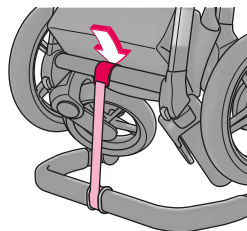


_ USING THE SAFETY BRAKE

To enable the safety brake on CONCORD CAMINO, press down the foot lever (17) on the right-hand rear wheel.

 WARNING! If the parking brake of the pram is activated, make sure that the parking brake is correctly engaged. It is also necessary to slightly move the pram in order to completely activate the parking brake.

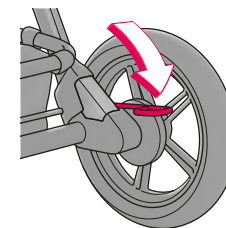

 
To release the safety brake, lift up the foot lever (17) on the right-hand rear wheel.

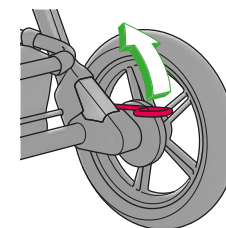

_ LOCKING THE FRONT WHEELS


To lock the front wheels of the CONCORD CAMINO in the direction of travel, position the front wheels so they point backwards and press the locking buttons down (10).

 To release the lock, lift the locking buttons (10) upwards.

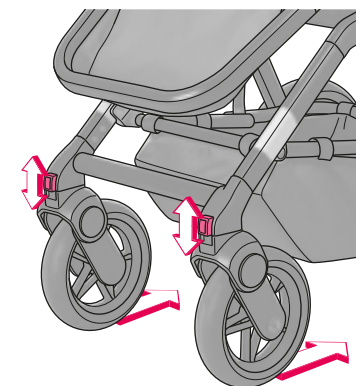

_ FITTING AND REMOVING THE SEAT UNIT

 The CONCORD CAMINO is equipped with ProFix adapters (15). These adapters are used to attach the CONCORD CAMINO's seat unit (04) to the stroller frame. You can fit the seat unit in one of two directions: either in the direction of travel or facing backwards.

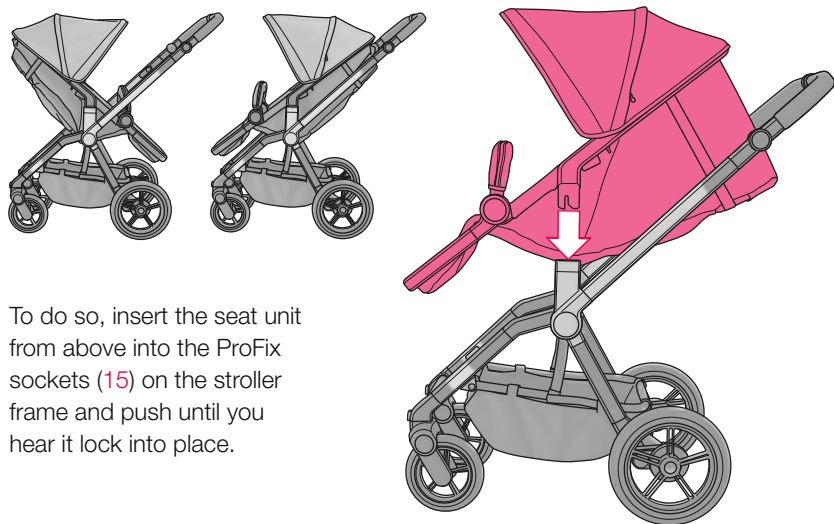

To do so, insert the seat unit from above into the ProFix sockets (15) on the stroller frame and push until you hear it lock into place.

 
 
WARNING!

- Always lock the safety brake before fitting or removing the seat unit.
- Always make sure you have secured the seat unit to the stroller frame before you place your child in the seat unit.
- Every time you use the CONCORD CAMINO, first make sure that all closures and locking mechanisms have been properly closed and locked into place.
- This vehicle has been designed for a single child and must not be used for several children simultaneously.

WARNING!

Never remove the seat frame from the stroller chassis if a child is still sitting there.


To remove the seat unit (04) from the stroller frame, press the seat unit's ProFix control unit (14) on the left and right at the same time and pull this up and away from the stroller frame.

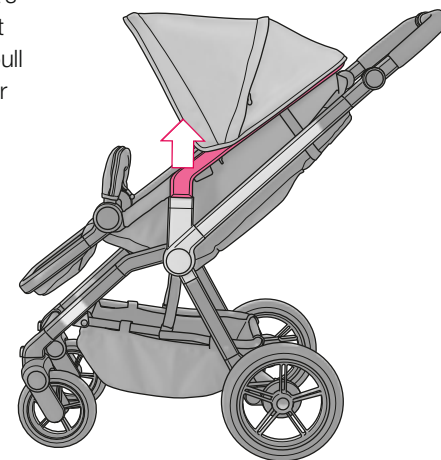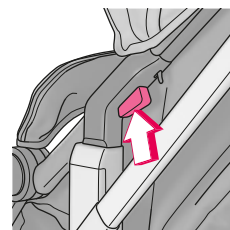


Tip: Your specialist retailer stocks CONCORD accessories (CONCORD AIR, CONCORD SCOUT, CONCORD SLEEPER) that are equipped with ProFix adapters matching the CONCORD CAMINO. This makes it simple to attach them to the CONCORD CAMINO. Before use, check that the CONCORD accessory is correctly locked into place in the CONCORD CAMINO.

Please also follow the operating instructions included with the CONCORD accessory.

 
_ USING THE HARNESSING SYSTEM

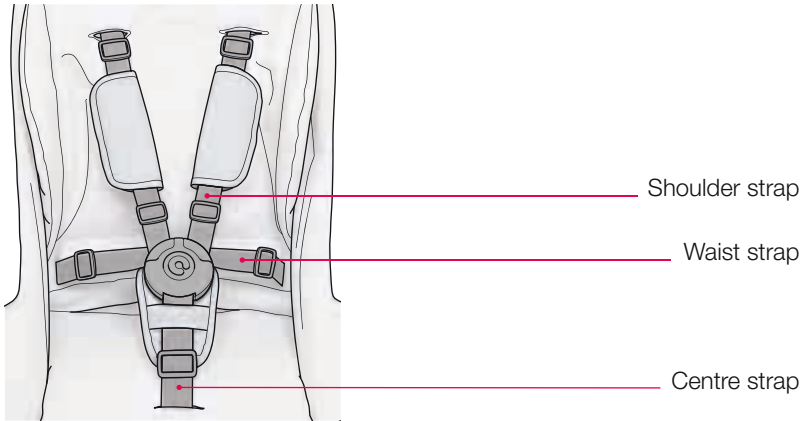

 Feed the centre strap with the buckle between the child's legs. Then insert the buckle adaptors on the shoulder and waist straps from above into the top of the buckle. They should click audibly into position.


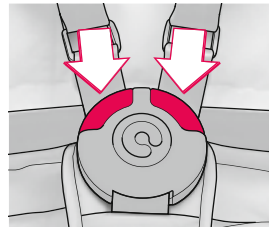


 To open the harness system, press the button in the middle of the buckle until the buckle adaptors are released..

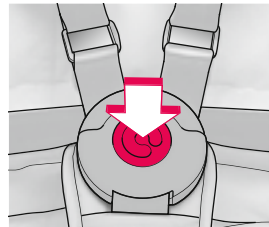

Take care that your child is always strapped in, with the buckle fastened, whenever you go out with the pushchair.

  Adjust the straps so that they are taut and lie close against the child. To adjust the strap length, slide the strap clasps up or down. Check that the straps are not twisted.

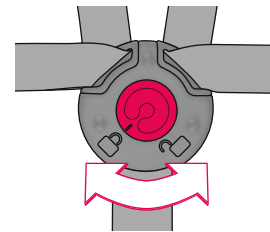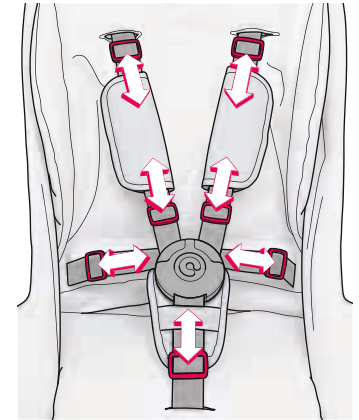



The childproof lock is on the back of the buckle. This can be activated and deactivated by turning. Activating the childproof lock locks the buckle opening mechanism.

WARNING!

Always use the shoulder and waist straps together with the centre strap.

_ ADJUSTING THE HANDLEBAR

  The handlebar (02) can be set to an individual position that is comfortable for you. To do so, press the release buttons (03) to the left and right of the handlebar (02) and move the handlebar into the position you want (so that it locks into place).

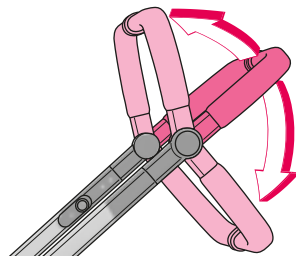
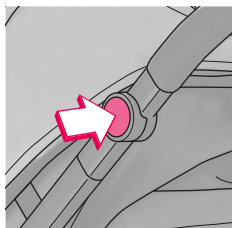


_ ADJUSTING THE FOOTREST

The footrest (09) can be locked into a range of different positions. To do so, press the adjustment knobs (08) to the left and right of the seat unit and move the footrest (09) into the position you want (so that it locks into place).


WARNING!

  - Never permit your child to stand up on the footrest.
- The legrest positions passed vertical are only to be used for storage.

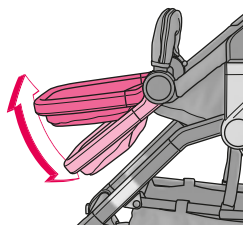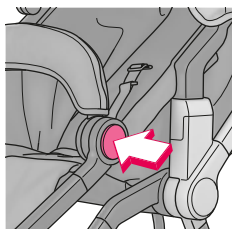


_ ADJUSTING THE SEAT ANGLE

 The tilt angle of the backrest can be adjusted steplessly with the help of the adjustment straps (16) on the back of the CONCORD CAMINO.

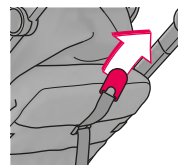

 Pull the upper adjustment strap (16) to tilt the backrest up.

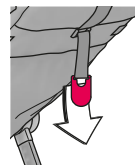


Pull the lower adjustment strap (16) to tilt the backrest down.



_ USING THE SAFETY BAR

The CONCORD CAMINO's safety bar (05) is pushed into its matching socket on the seat unit (04) and then locked into place.

 The safety bar can be removed when putting your child in and when taking him/her out. To do so, press the release buttons (07) located to the left and right on the inside of the seat unit and pull the safety bar up to remove it.

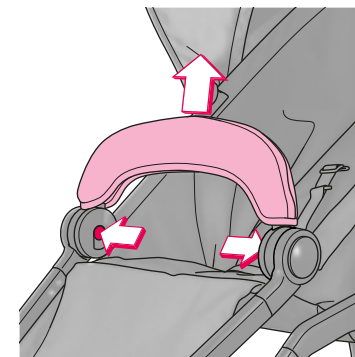


_ USING THE SUN VISOR

The CONCORD CAMINO's sun visor (01) can be locked into place in 4 positions.


The rear portion of the sun visor can be opened using the zip fastener to ensure better ventilation.

WARNING!

 Do not place loads/objects on the sun visor (01).

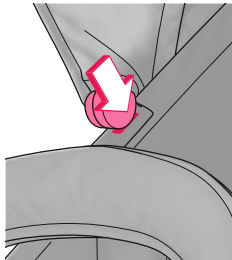

 To attach the CONCORD CAMINO's sun visor (01) to the seat unit (04), carefully insert the sun visor's adapters into the matching sockets on the seat unit and push until they lock into place. Now use the Velcro fastener to attach the sun visor to the seat cover.

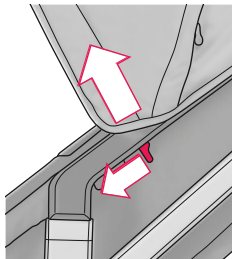

To remove the sun visor (01), first undo the Velcro fastener between the sun visor and the seat cover. Press the release levers on the sun visor adapters and pull the sun visor upwards to remove it.

WARNING! The occurrence of cutting, pressure and crushing points during these procedures are inevitable.

_ USING THE WIND SHIELD

The CONCORD CAMINO is equipped with an integrated wind shield (06).

 
To use the wind shield, open the zip fastener on the safety bar (05) and stretch the wind shield over the footrest (09).

If the wind shield becomes exposed to misture, please ensure that you dry it out thoroughly before stowing the wind shield away in the safety bar cover!



_ USING THE SUN SAIL

The CONCORD CAMINO is equipped with a sun sail.

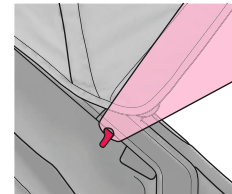

The sun sail can be stretched over the front edge of the sun visor (01) and secured to the release levers on the sun visor adapters.



_ USING THE RAIN COVER

To use the rain cover, pull the cover down from top to bottom over the seat frame.

The rain cover must always be correctly spanned and ensures sufficient circulation of air for your child.

Please ensure the rain cover is completely dry before replacing the cover in the storage bag!

 


_ FITTING, REMOVING AND CLEANING THE STROLLER COVER


To remove and install the cover, move the footrest to the fully top/rear position!

The individual parts of the cover of the CONCORD CAMINO are connected together and secured to the tube frame using press studs and Velcro fasteners.


First, release all of these connections.

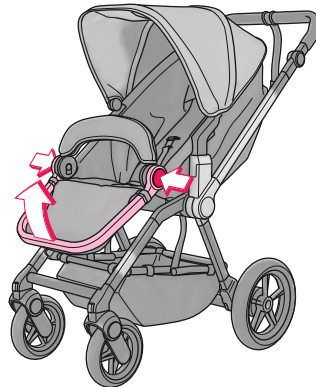

 Start by threading out the cover from the Keder rail on the footrest, through the aperture provided on the inside on the left.

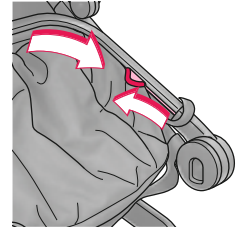

 
Subsequently, pull the cover upwards through the central aperture of the tube frame in the area of the head and out of the Keder rail.

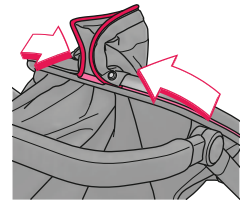

Before washing:

Open the strap lock and pull out the crotch strap from the plastic eyelets on the harness lock.

 It is not necessary to remove the shoulder straps. Remove the back plate from the closable bag on the rear of the cover.

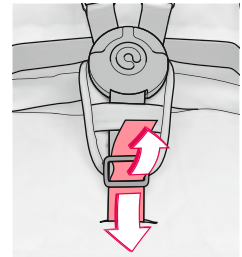


The covering parts can be washed in a washing machine. Leave the cover to dry completely after washing.

- The cover material colour may run slightly when wet, in particular during washing.
- Do not use solvents on the cover!





The tube frames and plastic parts of the CONCORD CAMINO can be wiped using a moist cloth.

 
As shown, pull out the crotch strap from the prior plastic eyelets on the harness lock. Regularly check the position of the plastic parts, as well as the safe function of the harness system!
Place the back plate in the closable bag on the rear of the cover and press the Velcro fastener together.

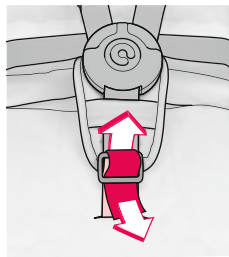

  
To install the cover, first thread the cover through the central aperture in the upper area of the tube frame and into the Keder rail on the right and left. Move the cover downwards until it is in the correct position.

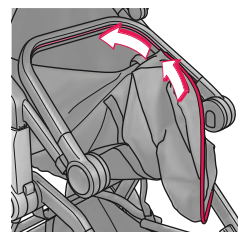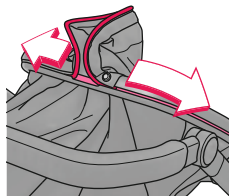

 Subsequently, thread the right end of the cover of the footrest into the aperture of the Keder rail on the inside of the footrest on the left.

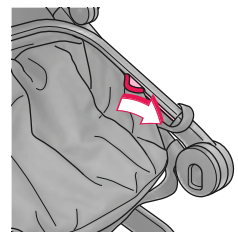


 Move the cover fully to the right and thread the left end into the Keder rail.

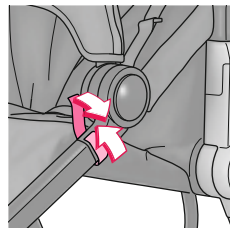


The individual parts of the cover of the CONCORD CAMINO are connected together and secured to the tube frame using press studs and Velcro fasteners.

 Close all of these connections.

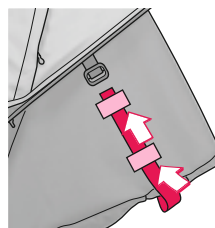

 Replace the straps from the tilt adjustment system and thread these as shown through the plastic eyelets. Check to ensure that all straps are correctly positioned and secured.

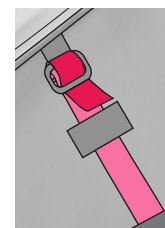

As one final check, make sure that the cover is correctly anchored in the Keder rail, and that all fasteners and connectors are securely closed.

_ CLEANING AND MAINTENANCE

 
To prevent corrosion, always keep the metal parts of the CONCORD CAMINO clean and dry. Use silicone spray to regularly lubricate the moving parts. Do not use oil or grease.

Only clean parts made from synthetic materials using lukewarm water and a mild cleaning agent. Coarse contamination can be brushed off when dry.

The front wheels of the CONCORD CAMINO can be removed for transport / cleaning.

Do this by pressing the the front locking knob and pull the front wheel down and remove it.

For reassembly, hold down the front locking knob and guide the front wheel onto the spindle and upwards. Release the locking knob and let the locking mechanism audibly latch.

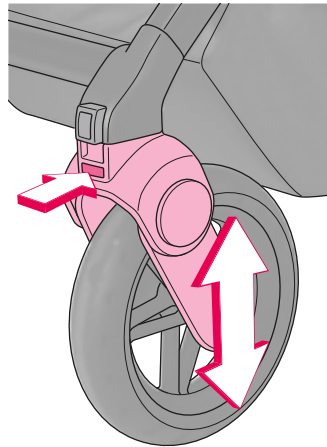

_ GUARANTEE

The guarantee begins on the day of purchase. The guarantee period corresponds to the statutory warranty period in the end-user's country concerned. At the manufacturer's discretion, the guarantee shall cover rectification, replacement or a price reduction.

The guarantee is valid for the original purchaser only. In the event of any defect, claims can not be considered unless the specialist dealer is notified of the fault as soon as it occurs for the first time. If the specialist dealer is unable to remedy the problem himself, he must return the product to the manufacturers together with details of the complaint, official proof of purchase and the purchase date. The manufacturers assume no liability for faulty goods that they did not supply.

The guarantee does not apply where:

- the product has been modified;
- the product is not brought back to the specialist dealer complete with proof of purchase within 14 days of the defect occurring;
- the defect was caused by improper usage or maintenance or due to anything else deemed to be the fault of the user, in particular failure to comply with the instructions for use;
- repairs have been carried out on the product by third parties;
- the defect was caused as the result of an accident.
- the serial number has been damaged or removed

The guarantee makes no provision for any alteration or deterioration to the product that is incurred through normal usage (wear and tear). The period of guarantee shall not be extended by any remedial measures carried out by the manufacturers in the event of a claim.

_ **DEUTSCH**
_ **ENGLISH**
_ **FRANÇAIS**
_ **ESPAÑOL**
_ **ITALIANO**
_ **PORTUGUÊS**
_ **NEDERLANDS**
_ **NORSK**
_ **DANSK**
_ **SUOMI**

Einbau- und Bedienungsanleitung
Instructions for attachment and use
Directives d'installation et mode d'emploi
Instrucciones de montaje y de uso
Istruzioni per l'uso e il montaggio
Manual de montagem e de utilização
Inbouw- en bedieningshandleiding
Bruksanvisning og monteringsveiledning
Monterings- og betjeningsvejledning
Kiinnitys- ja käyttöohjeet

Concord GmbH
Industriestraße 25
95346 Stadtsteinach
Germany

Phone +49 (0)9225.9550-0
Fax +49 (0)9225.9550-55
info@concord.de

www.concord.de

